

# Hanover Bath

CV1052, CV1053, CV1054 | 1.0

## GENERATION LIGHTING BATH

### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.




This instruction shows a typical installation.

### CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

**SAVE THESE INSTRUCTIONS!**

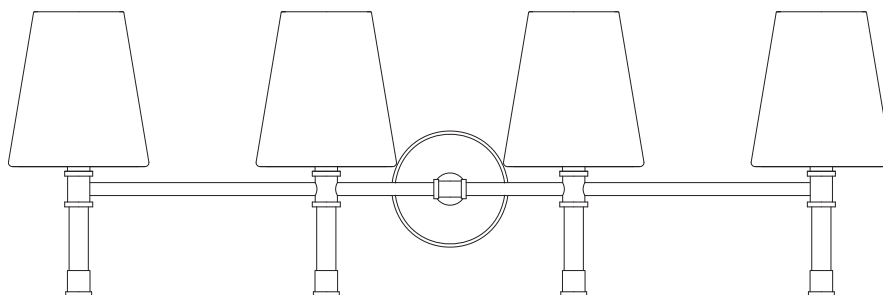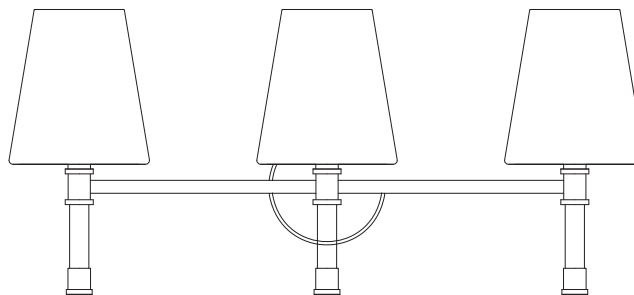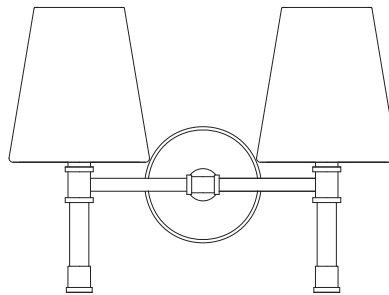

GENERATION LIGHTING


7400 Linder Ave., Skokie, IL 60077

T 847.410.4400 | F 847.410.4500

www.generationlighting.com

# Install the Fixture

IA

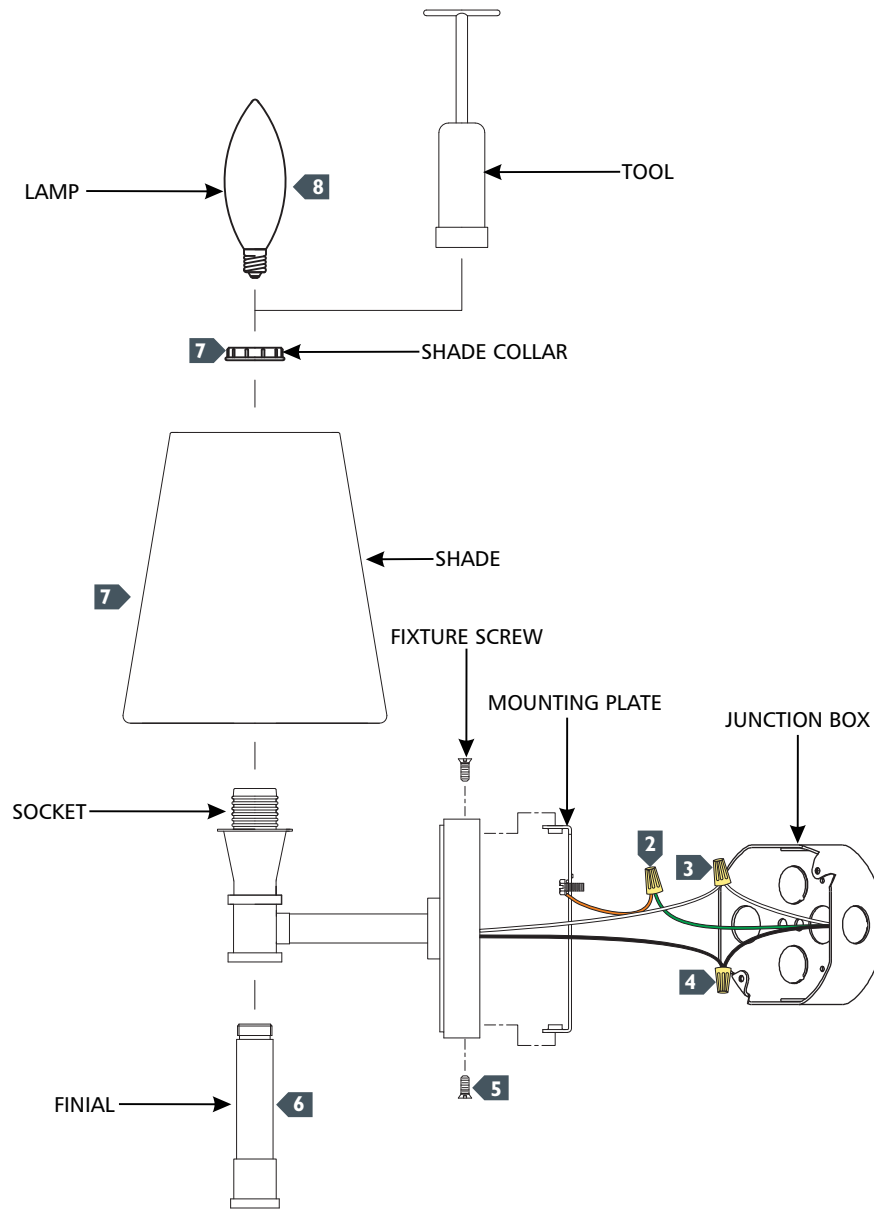

- 1 Secure the mounting plate to the wall by screwing the Junction box.
- 2 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 3 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 4 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 5 Neatly place all the wires and wire nuts into the junction box, place the fixture onto the mounting plate and secure it in place with the fixture screws.
- 6 Install the finial by screwing it into the bottom of the fixture.
- 7 Place the shade over the socket(s) and use the provided tool to secure it with the shade collar.
- 8 Screw the lamps into the socket(s). Refer to the label on the lamp socket for Max Wattage Information.